


VISIT WWW.ZOJILA.COM FOR MORE PRODUCTS & WARRANTY REGISTRATION

Owners Manual: Rohan dish drainer

ZM-ROH-10

Congratulations on your purchase of the Rohan dish drainer. You have procured the best of its kind in the market and are assured of long years of hassle-free service with your product. Please register your purchase on www.zojila.com to avail of the warranty.

After unpacking, please check the items to ensure that there is no damage to any of the parts. The Rohan dish drainer consists of 4 parts: the drain board, dish rack, cutlery holder and divider. The drain board has a slight curve from side to side and a tilt from back to front.

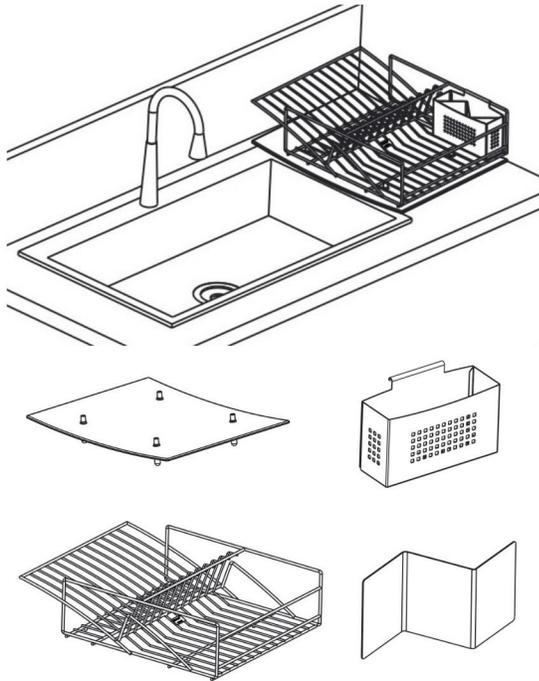

If you find any damage, please contact the seller. If the damage has been caused by shipping, please contact the shipper to report the damage and get a claim number.

Usage

Your dish drainer does not require any assembly. Place the drain board on the counter on its plastic capped legs so that the long side overhangs the edge of the sink. Water will drain from this edge into the sink.

Place the dish rack so that the 4 balls on the bottom wires go into the open ends of the 4 leg tubes. You can place it with either the plate compartment closer to you or away from you. The utensil holder may be hung on the bar at either end of the drink-ware compartment or even outside the dish rack over hanging the sink, to create more room inside. You can set dishes, pots & pans, tumblers, cutlery and anything that you want drained, even vegetables, on the rack. A sponge holder (Zojila accessory Khiva) is available that hangs outside on the wire rack.

Care

Your dish drainer requires minimal care to keep it in an

attractive condition. All 4 parts are made of 18-8 stainless steel which does not rust. If you have soft water, you will only need to wipe it down or wash with dish soap as needed. However if you have hard water or water with high mineral content, you could have a build-up of deposits from calcium, lime or even brown spots on the underside of the rack wires. These brown spots are not due to the wires rusting and can be removed by scrubbing. We recommend inspecting the underside of the rack and cleaning at least once a month if you experience this condition.

For the most part, you will only need to use soap and water. Hard water spots and deposits can be removed with vinegar and baking soda. Soak a paper towel with vinegar and leave it overnight on the drain board. If the rack wires have brown spots or deposit build up you can fill either your sink or a plastic tub with a solution of CLR and soak the rack in it overnight.

You can also remove deposits on the drain board by brushing dry with a scotch-brite scouring pad. Make sure you brush along the lines of the drain board not across them. Do not use steel wool or brushes made of metal on any of the parts. Other cleaners that are effective are Zud and Bar Keepers Friend which are available at hardware stores. The drain board can be easily cleaned either in place on the counter or in the sink. All 4 parts are dishwasher safe. We recommend removing the plastic feet before putting it in the dish washer.

If you prefer to keep your dish drainer away from the sink, you can do so with the use of a dish or tray (Zojila accessory tray Pantanal) to catch the water draining off.

Feedback and Returns

We welcome your comments and suggestions. If you have any questions about the use or care of this or other Zojila products, please email us at store@zojila.com

If you would like to return this product, please contact the seller for return instructions. Please retain the package and packaging materials. When repacking please ensure that the dish rack is placed on the back side of the drain board with the 4 legs going in between the wires. Insert the divider inside the cutlery holder and tie the cutlery holder with twist ties to the rack. Make sure you include the return authorization or your order information.

When you start using the dish drainer, you will notice water tends to bead up and stay on the drain board as drops instead of running off. To prevent this, wash the surface of the drain board with soap to remove any trace of oil and then the water will form a thin film and drain.